

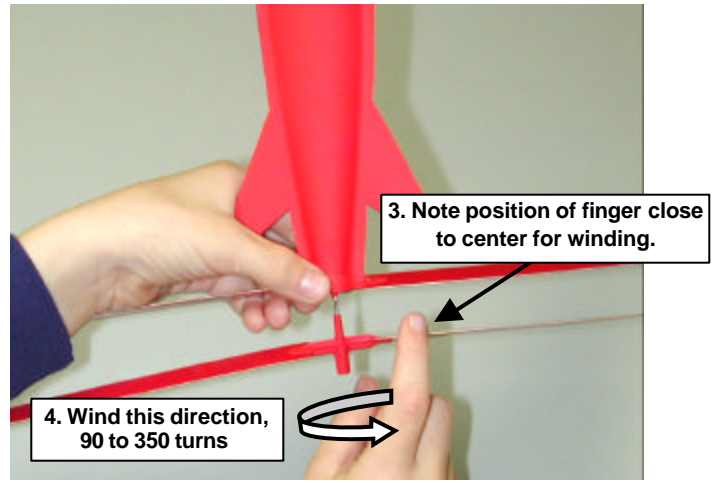
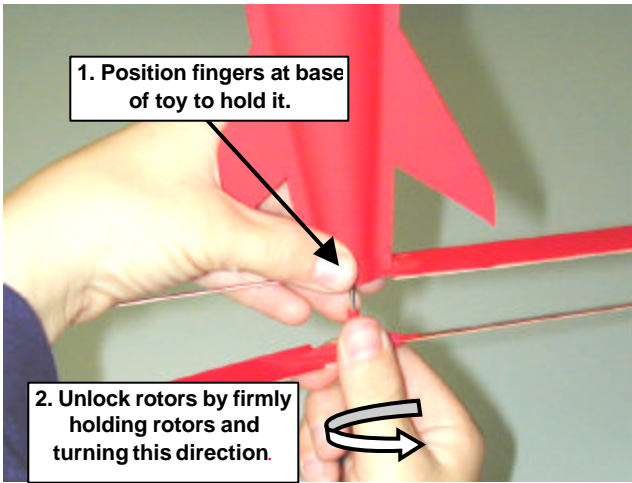


SkyBlades® Hybrid Rocket Operating Manual


PREFLIGHT / WINDING INSTRUCTIONS

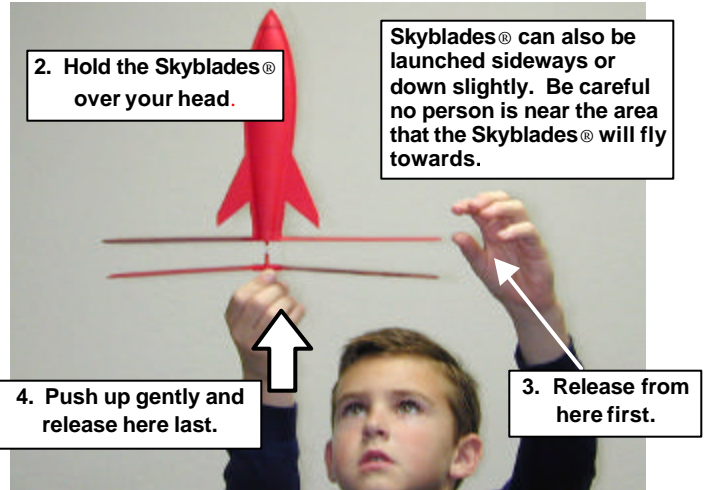

LAUNCHING INSTRUCTIONS

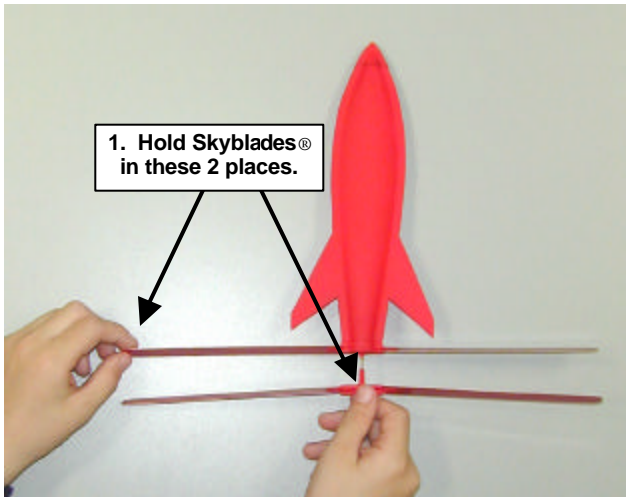

HANDLING INSTRUCTIONS

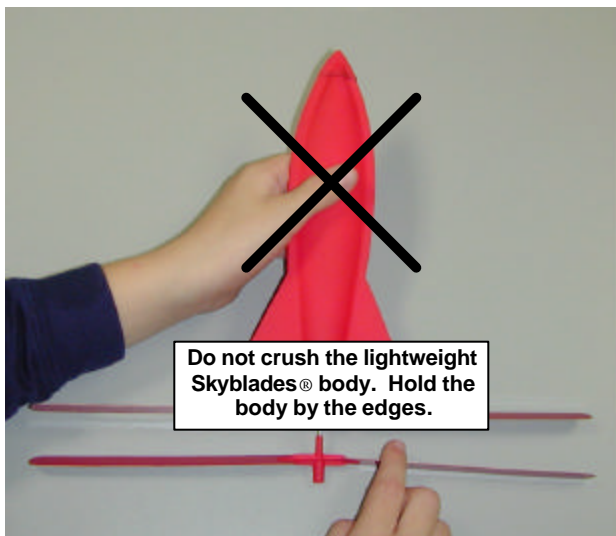

Do's

Replace rubber motor when it is damaged
Replace damaged rotor blades
Launch toy with your back to the wind
Lubricate rubber motor with liquid dish soap when dry
Repair toy with white glue and clear tape
HAVE FUN AND EXPERIMENT !!!





Don't

Don't over-wind the rubber motor
Don't crush the lightweight body
Don't launch toy into somebody's face
Don't launch toy into your own face
Don't launch toy in direction that could damage property
Don't fly toy when it is windy.

Checkout www.skyblades.com for more hints and tips
Send \$1.00 and SASE to Fascinations® for replacement rubber motors.

Look for automatic launch pad and automatic winder.

RUBBER MOTOR REPLACEMENT INSTRUCTIONS

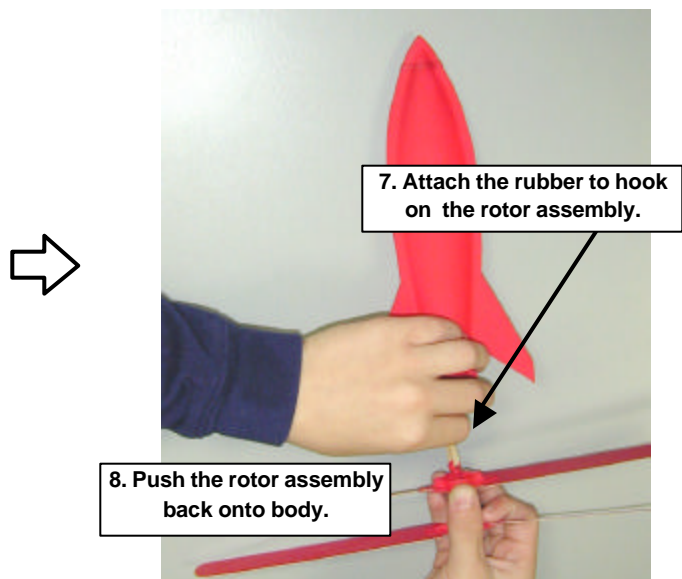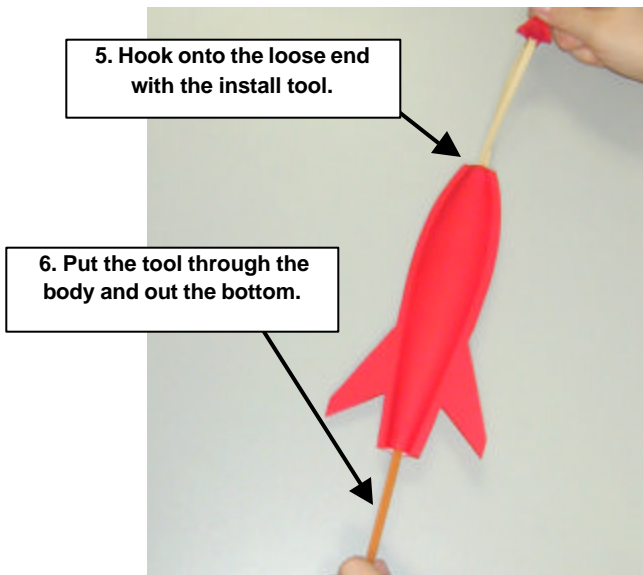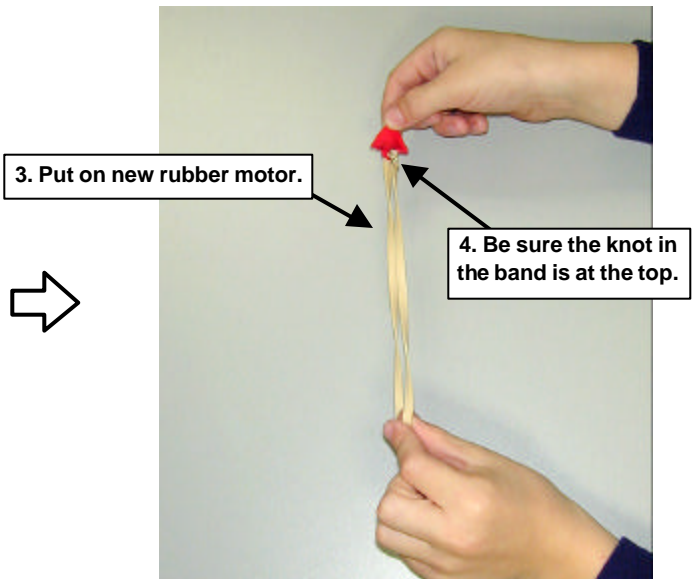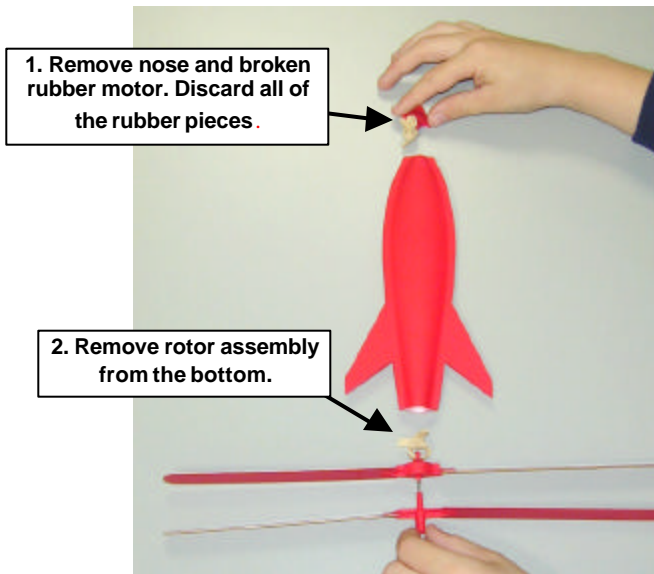

BLADE REPLACEMENT INSTRUCTIONS

